

## How to Use the Electronic Lock (KC-S)

### A. How to use

The initial number at the time of purchase is \* 1 2 3 4 5 6 #.

1. Press \* first. (There is a "beep" sound while red light is being turned on.)
2. Press 1 2 3 4 5 6. (There is a "beep" sound with the red light on.)
3. Press #. (It begins to operate with the green light on.)

### B. How to close

Press # (It begins to operate with the green light on.)

(In case of the door does not operate with force, there is a beep sound three times at interval of 10 seconds)

### C. How to change the switch password

1. Press the change switch located in the case.  
(A "beep" sounds with the green light turning on.)
2. (While the green light is on) Press \* and the new password and press #.
3. The procedure is completed with the sound of beep, beep, beep.

### D. TEST (Do not close the door)

1. \* Press the new password, #.  
(The number is well inputted if the green light is on.  
It is wrongly inputted if the red light is on with beeping sounds that the changing switch is pressed again and input is made.)

### E. Function stop

1. If the wrong number is pressed, there will be "beep, beep, beep" sounds with red light turned on.
2. If the wrong number is pressed 3 times or more, all operation is stopped.  
(Press the correct number after 3 minutes, it operates again.)
3. Master number inputted from the plant - It can not be changed.

### F. Battery replacement

1. When the red light flashes in pressing \*, it is a signal that the battery is running low.
2. Replace 4 batteries of 1.5 v (alkaline).