

Defiance Safe 1 Hour Data Fire Safe Instruction Sheet

How to open Electronic Digital Lock Safe with Key

To Open safe for the first time.

1. Press **Enter** (Green lamp lights up)
2. Press **7 7 7 7** (Factory default code)
3. Press **End** button

You will hear an "OK" melody. Within 4 seconds lift the handle up and open door



How to set your personal code

User can hold 1 personal number (4-16 digits available)

To Change Pin Number

1. **Open** the door using existing code
2. Press the Button on the **INSIDE** of door
3. Enter your **NEW CODE**
4. Press the **End** button
5. You will hear an "OK" Melody
6. Check new number **Enter -> CODE -> End**

Key Override

- Open the cover by sliding to the right.
- Use the override keys (two supplied) by turning the key 360° Clockwise
- Operate the handle to open.
- Note: Turn Key 360° Anti-Clockwise to lock handle again.

Notes on changing personal codes:

- Always check the new code with the **DOOR OPEN**
- Old numbers shall be replaced with new one
- Codes must be between 4 and 17 digits long
- Long delays between entering numbers may cause problems. After pressing the button on the inside of door you must enter the code within 5 seconds
- Green lamp must turn on while changing your code.
- (Check you pressed button on inside of the door.)



Trouble Shooting

Problem: When code is entered Red lamp turns on and "ERROR" Melody played

Cause: Incorrect opening sequence was used (safe has detected incorrect code)

Solution: Check code and try again

Problem: Safe won't work or Safe won't open after setting code

Cause: Incorrect opening or setting sequence was used 3 times in a row and the safe has detected incorrect code. This triggers a time delay before re-entering the code

Solution: Allow safe "Time Out" for 10 min.

Problem: All key buttons do not work except **Store** key

Cause: The button on the inside of door was held in and not pressed.

Solution: This places the safe in protective mode. To remove this mode, enter the code as per normal *except* substitute the "**Store**" button for "**End**". EG **Store -> Personal Code -> End**. Then open the safe as per normal **Enter -> Personal Code -> End**

How to Change battery

1. When the battery is low the red lamp will glow after the # button is pressed. Only a few openings are now possible. (You should also hear an error melody played.)
2. The battery housing is located behind the square shaped Electronic Digital Lock (EDL) controller
3. Slide the EDL controller "UP"
4. Change 4 x AA batteries. Note: Always use good quality alkaline batteries. (Other types may cause problems)
5. You will hear a melody played when the last battery is inserted.
6. Expected battery life of approx 1 year if used 5 times or less a day

