 





1000 Series Lock Operating Instructions

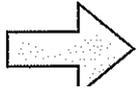

To Open

Enter Factory Code 1 2 3 4 5 6
Each number is accompanied by a BEEP.

 
2 beeps at end of entry signifies number accepted.
On a successful number entry, -turn safe handle to open safe.
Safe is now open.

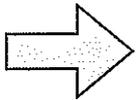

To Lock

Close safe door and turn handle to close position.
The lock will lock automatically.


ALWAYS LEAVE THE SAFE DOOR OPEN WHEN CHANGING AND CHECKING CODES!

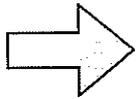

To Change the Number


Enter 0 0 0 0 0 0
Enter existing number (1 2 3 4 5 6) for new safe
Enter new number twice (e.g. 654321 + 654321)
2 beeps signifies number accepted.
Test new number before locking

Note: The number returns to original if the change is unsuccessful.

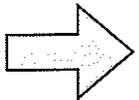

Anti - Tamper

If 4 incorrect codes are entered in a row,
The lock will enter a 5 minute penalty period
During which it will not accept input and will
beep continually every 5 seconds.
Pressing a key during the penalty time extends the period a few seconds.

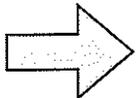

Changing the Battery

The unit runs on a 9V Duracell Battery. No other
brands will power the lock.
Simply slide the pad housing up and carefully pull
it away from the mounting surface to expose the
battery compartment.

MSC SAFE CO.

Shop 2-3/227 Main Street, OSBORNE PARK, W.A. 6017

Phone: (08) 9344 1962 Fax: (02) 9207 1578

www.mscafeco.com.au msc@mscafeco.com.au