

Basic User instructions



Changing your safe code

(Default Manager code "123456". Safely store the new code and perform various opening / closing tests before closing the safe door).

To be performed with the door open!

1. Press and hold 0 until the double beep. The LED remains on.
2. Enter the old code. (Factory setting is 123456)
3. Enter the new code.
4. Confirm the new code.
5. Perform various opening / closing tests before closing the safe door.

Penalty

After four attempts to enter an incorrect code, the lock starts a 4-minute delay period. Each attempt to enter the code within the 4 minutes delay period restarts the count.

Battery

A long beep during opening indicates a low battery level. Replace immediately the low battery with a new Alkaline battery. Pull tab down to release the 9V battery.

Sound signals

A double beep normally indicates a correct operation. A long beep indicates an incorrect operation and the end of the operation itself.